

TV Remote Control

1. Press the Power Button to turn on and turn off the TV



2. Press this button to turn on and turn off the TV Channel



3. Press the CH list to view the channel selections

4. Use this up & down arrow to change the channel's page selection

5. Use this arrow to scroll up and down one by one

6. Press "OK" button once you find your preferred channel